


### INTERMATIC CONTROL/BREAKER BOX

### FRANKLIN CONTROL BOX

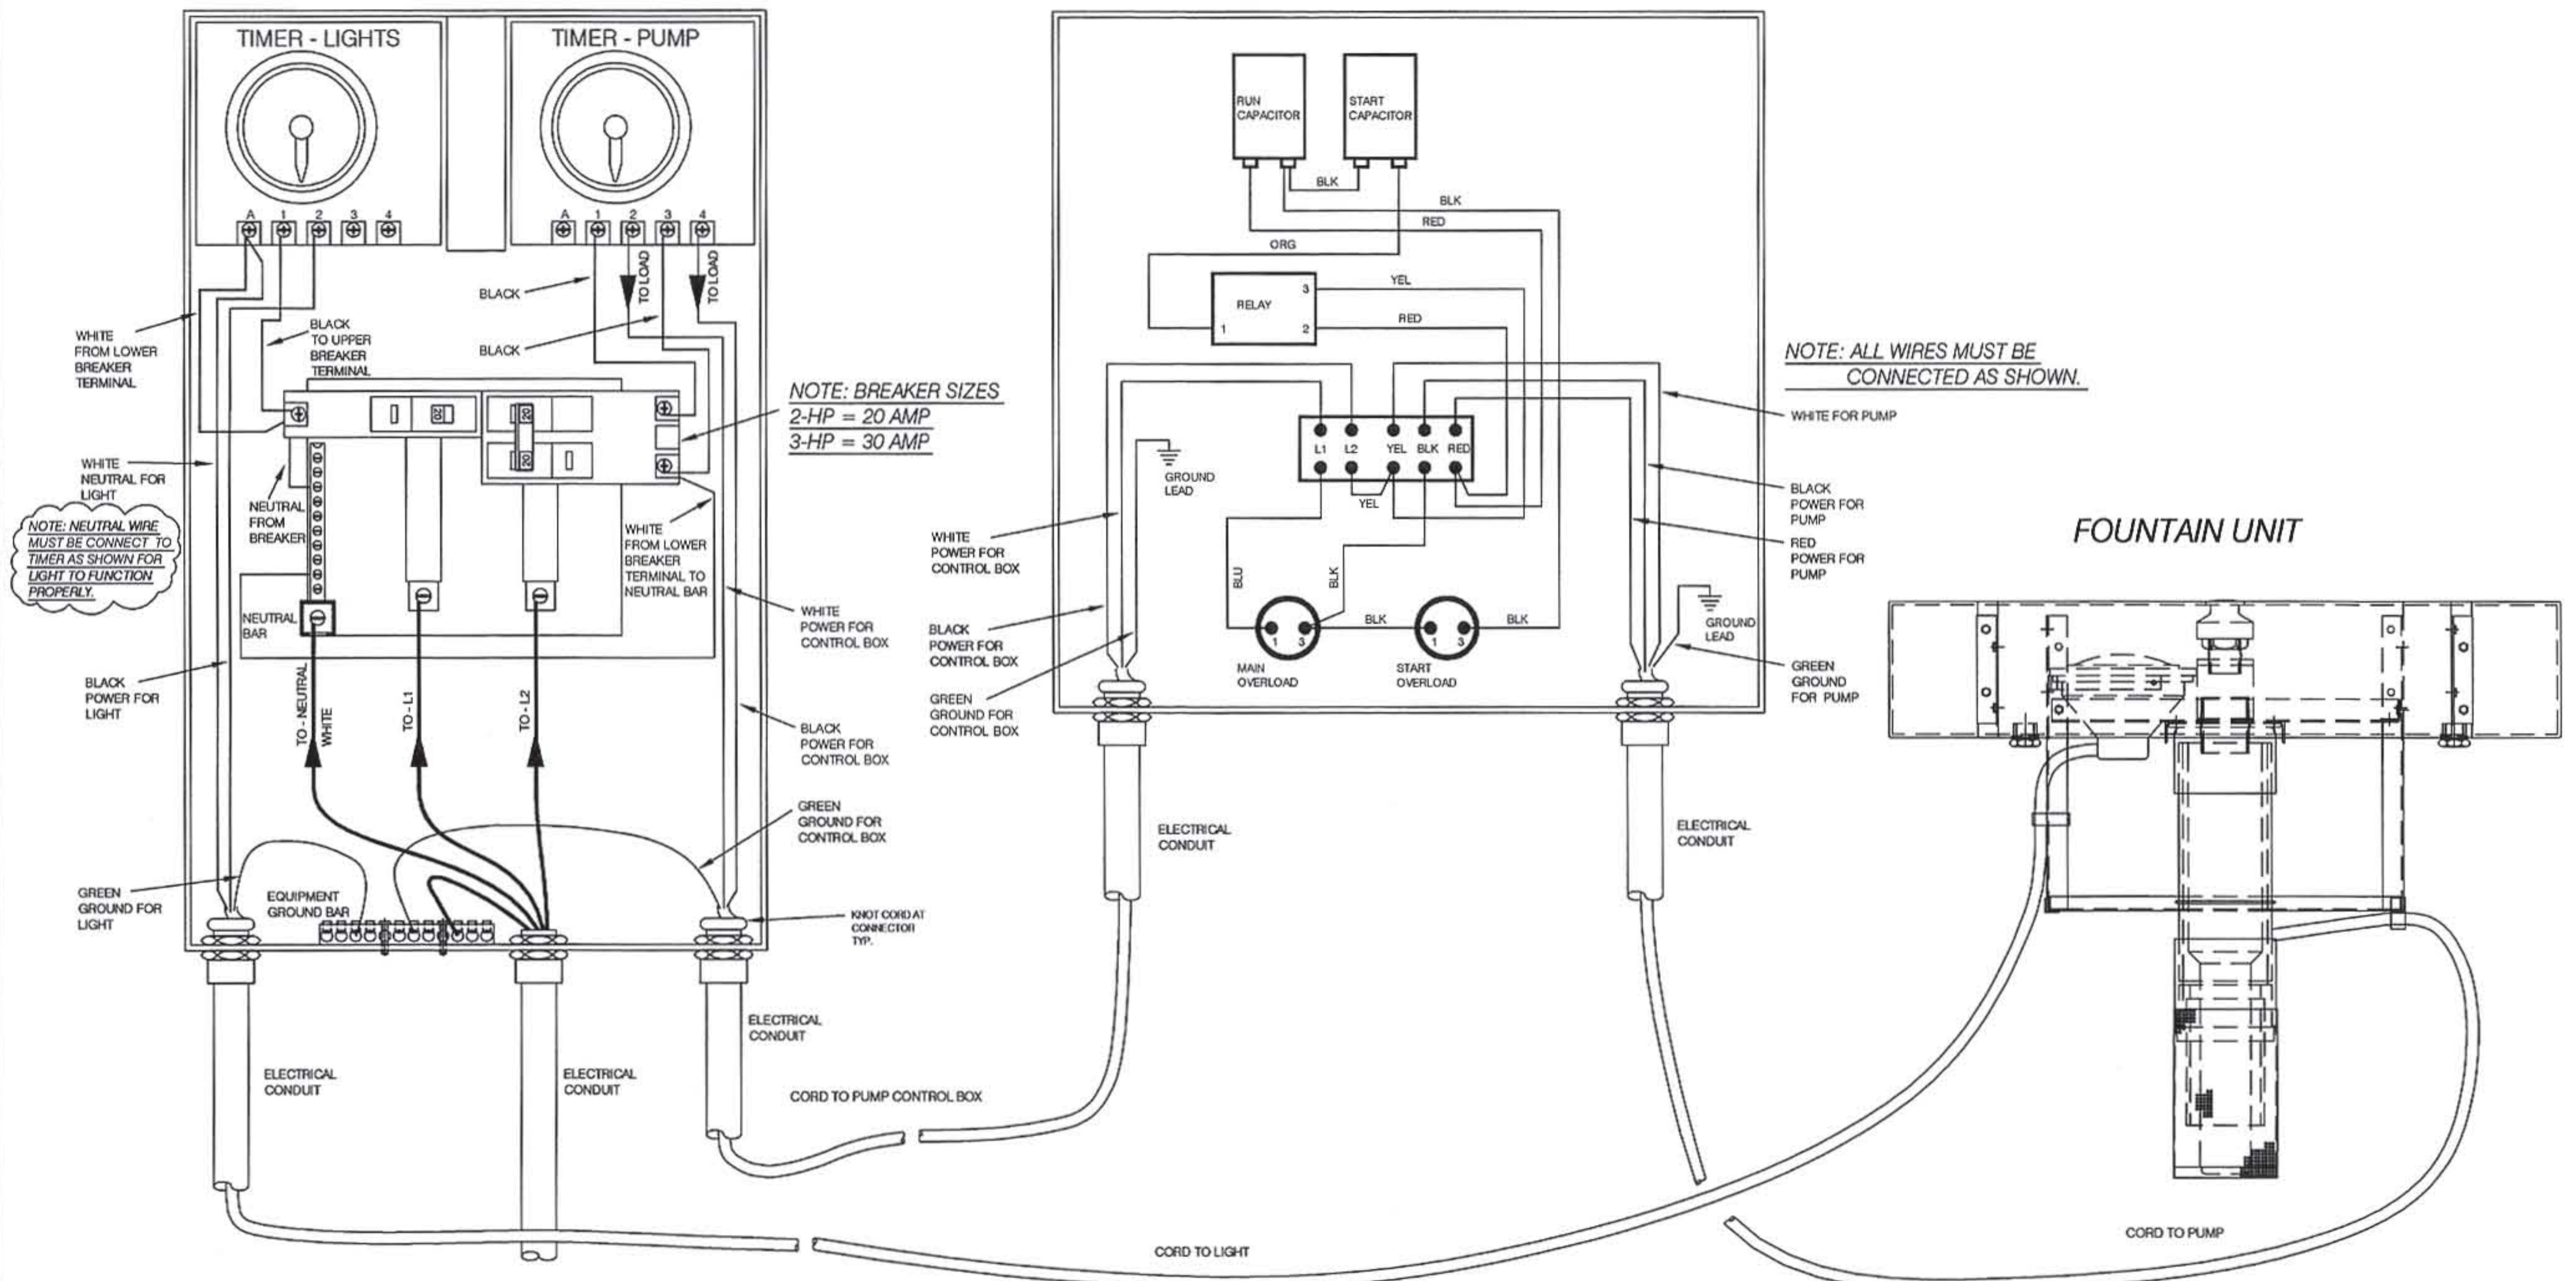

**NOTE: BREAKER SIZES**  
 2-HP = 20 AMP  
 3-HP = 30 AMP

**NOTE: ALL WIRES MUST BE CONNECTED AS SHOWN.**

### FOUNTAIN UNIT

**NOTICE**  
 THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY MATERIAL WHICH IS THE PROPERTY OF LAKE FOUNTAIN AND AS SUCH MAY NOT BE COPIED OR REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MATERIAL IS LOANED AND SUBJECT TO RETURN UPON DEMAND AND UPON THE EXPRESS CONDITION THAT IT WILL NOT BE USED DIRECTLY OR INDIRECTLY IN ANY WAY DETRIMENTAL TO THE INTERESTS OF LAKE FOUNTAIN.

**Lake Fountains & Aeration Inc.**  
 4155 St. Johns Parkway, Suite #1800, Sanford, FL 32771  
 Ph (407) 324-1515, Fax (407) 324-1344

DATE: 5/26/05 DRAWN BY: JWG  
 SCALE: NA CHKD. BY:

TOLERANCE UNLESS OTHERWISE NOTED  
 DECIMALS .XX ± .010 FRACTIONS ± 1/32 ANGLES ± 1/2  
 .XXX ± .005

CONTROL/BREAKER BOX SCHEMATIC- 2 & 3 HP  
 230 VOLT AC (FOUNTAINS)

CAD FILE - 900-1002-00 SHEET NUMBER 1 OF 1 DRAWING NUMBER 900-1002 D

SYM	REVISIONS	DATE	CK.	ORIGINAL DWG. NUMBER:	XXXXXXX